

INSTRUCTIONS


Self-adhesive film semaDK® and semaSORB®



se ma Gesellschaft für Innovationen mbH
Industriestraße 12
D-06869 Coswig . Germany
Phone: +49 34903 30467 Fax: +49 34903 30465
Internet: www.sema-gmbh.com

Online Shop: www.semasorb.com
E-Mail: info@sema-gmbh.com

Link: <https://youtu.be/PrbDZK2QM1U>

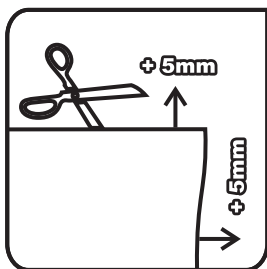

1.

Cutting
Ad cut 5mm on
each side.


Utensils:

- Scissors & Ruler & Soft microfiber cloth
- Spray bottle with mounting solution
(water with 1- 2 drops of the concentrates)
- Soft cloth or soft kitchen paper
- Cutter
- Film squeegee



2.

Clean the glass pane
with a microfiber cloth.
Spray with assembly
solution until the surface
is wet.

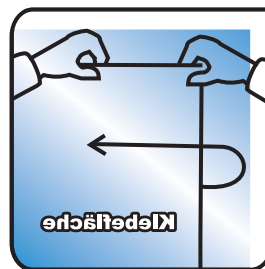

6.

Turn the film, create the glue
side at the top of the glass
edge. Important! The glass
pane should still be wet -
otherwise spray it again.



3.

Create the cut film, the
silicone protection film
shows you




7.

The adhesive side is on the
wet glass pane. Now also wet
the film outside.



4.

Remove silicone
protection film with the
help of 2 adhesive
strips

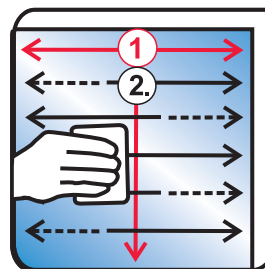

8.

Use the film squeegee to remove
the water.

① Start at the top edge. Brush
the water downwards from the
middle to the right and left

② Repeat the process, spreading
evenly. Make sure the surface is
wet during the pouring process



5.

Spray the adhesive side
with the assembly
solution



9.

Cut the film to fit the edge of the
glass. Always cut out from the
corner of the frame. Then wipe the
edge of the film dry.

Absorb residual moisture on the
frame carefully with a soft kitchen
towel (not microfiber).

Attention! Never clean the film dry.

Notes/instructions

for applying the self-adhesive **film** to the glass surface

Test the compatibility of plastic surfaces in an inconspicuous place for at least 14 days before use!

1. Cleaning the glass surface

Spray the glass surface with a mixture of water and a few splashes of the installation concentrate and clean the entire surface with a microfiber cloth. Then wipe the wet glass surface with a rubber wiper. Micro-dust and adhesive residues on the glass surface cause tiny bulges that are visible to the naked eye.

In the case of new toughened safety glass (ESG), it is essential to thoroughly clean any silicone-like glass surfaces with a solvent such as ethanol or isopropanol beforehand. Otherwise, the film may peel off and roll up shortly after being applied to the glass.

2. Persistent soiling

Spray persistent soiling and adhesive residue on the glass surface with a mixture of water and a few drops of the installation concentrate and remove with a glass scraper. Clean the glass surface thoroughly with the aqueous cleaning solution and a microfiber cloth so that all micro-deposits have disappeared. Wipe the wet glass surface with a rubber wiper.

Please only use the installation concentrate supplied. Other agents can cause chemical reactions with the adhesive layer, which may result in permanent clouding.

3. Applying the film

Spray the vertically aligned glass surface fully and very wet with the installation spray solution (e.g. 0.5 l water + a few drops of installation concentrate).

The film should be facing you vertically. Now peel off the silicone protective film using 2 adhesive strips, starting at the corner. Spray the exposed adhesive side with the mounting spray solution wet

Turn the film over and place the adhesive side at the top of the glass edge and align. The installation spray solution allows the film to be moved back and forth for a while until it is in the correct position. Spray the film over the entire surface again. Use the plastic squeegee (felt, rubber) to spread the water completely and evenly without leaving any marks. Starting at the top edge from the center, squeegee once to the left and once to the right. Squeegee down once in the middle. Now spread the water evenly from top to bottom with the squeegee. If necessary, repeat this process.

Always spray the outside of the film wet and only then smooth it out!

Note: The adhesive side and the glass surface must be sprayed very well. When applying to plastic surfaces, please be sure to test it on a spot first! Cut the film to fit the frame using a cutter knife. Always cut out starting from the corner of the frame Carefully absorb the remaining moisture along the frame with a soft cloth / kitchen paper (not a microfiber cloth).

Some of the freshly laid foils are still cloudy. This cloudiness will disappear within approx. 30 days after installation. In cold seasons, this process may take longer.

4. Notes/ Informations

The films can be cleaned 30 days after installation with a window cleaning agent (except TFT and LCD monitor cleaning agents) that does not contain abrasives. Hard sponges, microfiber cloths, coarse cloths or brushes must not be used. Soft sponges, soft cloths or rubber wipers are recommended.

Never clean films dry.

The optimum temperature of the surface to be covered is between 15 degrees Celsius and 25 degrees Celsius. Avoid direct sunlight and draughts during installation. If the window is too hot, bubbles will form under the film which cannot be removed afterwards. Do not install outside in the rain.